

## Technical Specifications

|                             |  |
|-----------------------------|--|
| Materials                   | Steel.                                   |
| Connections                 | 1/2" flow and return.                    |
| Test pressure               | 10,5 Bar                                 |
| Maximum operating pressure  | 8 Bar                                    |
| Maximum working temperature | 95°C                                     |
| Packaging                   | Cardboard protection and shrink wrapped. |

**PLEASE NOTE:** Systems using micro bore pipework must have adequate pressure and flow rates for the number and style of radiators on the system.

## Terms & Conditions

All products must be inspected once removed from the packaging and The Radiator Company notified within 28 days of delivery of any scratches, blemishes or other damage. The Radiator Company will then replace the radiator.

Imperfect radiators should therefore not be fitted and The Radiator Company will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If The Radiator Company are not notified within 28 days of the date on the signed delivery note then it will be deemed that The Radiator Company have fully complied with its obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims.

We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation. The Radiator Company cannot accept responsibility for items damaged after delivery.

## Guarantees & Liabilities

The Poppy is guaranteed for 10 years. The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to The Radiator Company.

## Fittings Instructions



Cod. 934M1117

Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty.

The Radiator Company  
Units 13 - 14 Charlwoods Road  
East Grinstead  
West Sussex  
RH19 2HU




Cod. 934M1117

## Poppy - Fig 1

| L<br>mm | L'<br>mm | P<br>mm | M1<br>mm |
|---------|----------|---------|----------|
| 398     | 354      | 40      | 89-104   |
| 498     | 454      | 47      | 95-110   |
| 598     | 554      | 57      | 105-120  |

● = recommended bracket positions

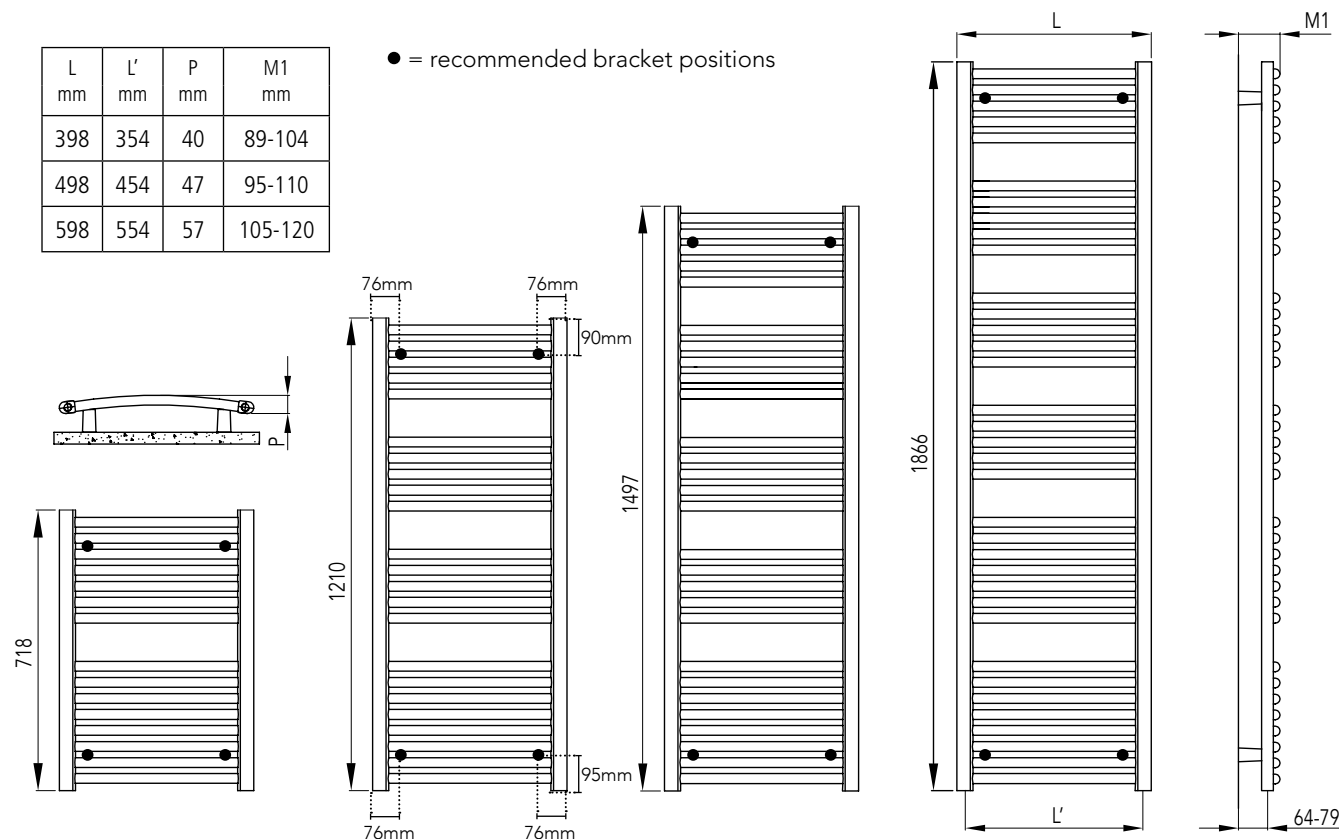

## Pipe Centres

|                            |   |                       |
|----------------------------|---|-----------------------|
| Pipe centres left to right | = | width minus 44 mm     |
| Pipe centres from wall     | = | 64mm - 79mm           |
| Depth from wall            | = | See table column "M1" |

## Contents

You should have:

- 1 Towel rail
- 4 Wall brackets (in parts)
- 1 Airvent

You will need:


- Tape measure
- Electric drill and bits
- Spirit level
- Screwdrivers
- Allen Key

## Commission

Please Note: In accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we strongly recommend flushing the heating system post installation of new radiators and then adding the correct quantity and type of inhibitor for use with your radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.

## 1 Unpack & Inspect

The Radiator Company prides itself on selecting products from manufacturers who exercise tight quality control measures. We only select models with excellent standards of welding and brazing, as well as high quality finishes. All of our products are well packaged and should reach you in perfect condition. Just in case however, we offer a minimum 5-year no quibble guarantee for all radiators and towel rails.

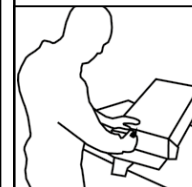


Please carefully unpack and inspect this radiator and all fittings. The Radiator Company must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on back page.

## 2 Mark Bracket Positions

### Fig 2

Bracket Assembly

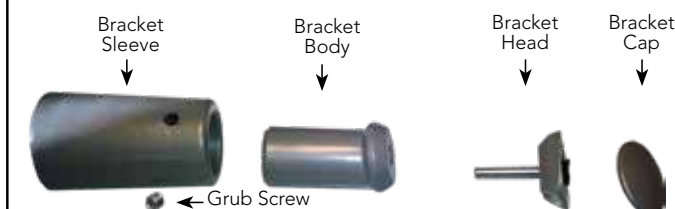

Before installing the towel rail please affix the provided air vent.

As per Fig.1. Bracket positions

Width = width of towel rail less 152mm (76mm either side)

Height = Top brackets should be 90mm down from the top of the towel rail. Bottom brackets should be 95mm up from the base of the towel rail.

Mark brackets as per Fig.1. using a spirit level.

## 3 Fix Brackets and Hang

Fit Bracket sleeve Fig.2. to wall using suitable fixings.

Ensure that the grub screw on the sleeve is facing downwards.

Insert bracket body into the sleeves on the wall.

Offer towel rail up to the brackets and insert bracket head on the top two brackets and then onto the lower two brackets.

Ensure the towel rail is vertical and tighten grub screws on bracket sleeves.

Insert bracket caps.